


PARTICULATE FILTER TESTER

DPF TESTER

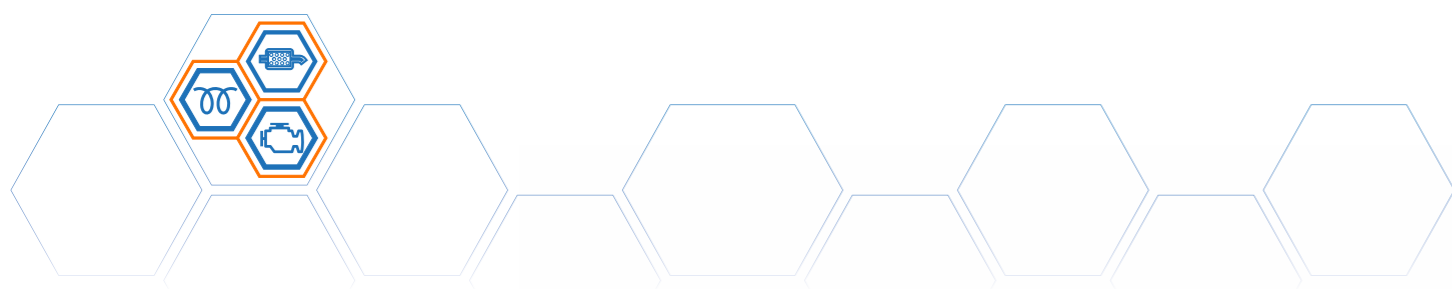



DPF TESTER

The DPF TESTER is packaged in a carrying case which includes:



DPF Tester



Pressure sensor



Charging cable



Data cable



Sensor connector



Instruction manual

The operation of the **DPF TESTER** is very simple and intuitive.

Simply flow an air stream using our **CTW 1200** filter washer or by any other method, including the filter mounted on the vehicle.

With the sensor connected to the **DPF Tester** and the air flow the **DPF Tester** will display a back pressure value.



TABLE OF VALUES

	CLEAN FILTER	DIRTY FILTER	CLOGGED FILTER
RPM'S	PRESSURE mBar	PRESSURE mBar	PRESSURE mBar
Idle 800-900	2-10	10-16	20-40
1500	10-15	20-30	40-60
2500	20-25	30-50	70-90
3000	30-40	50-70	90-120



DPF REVIVAL

Pol. Ind. Villayuda
C/ la Demanda S/N
Naves Azucarera, Nave C1
09007 - Burgos
ESPAÑA

Tel : +34 947 215 125

www.dpf-revival.com

Email: info@dpf-revival.com

ISO 9001
ISO 14001
BUREAU VERITAS
Certification

